



## GB Fitting Instructions for Basic Carrier

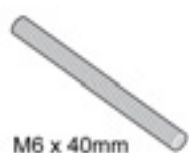

x 2

M6 x 40mm

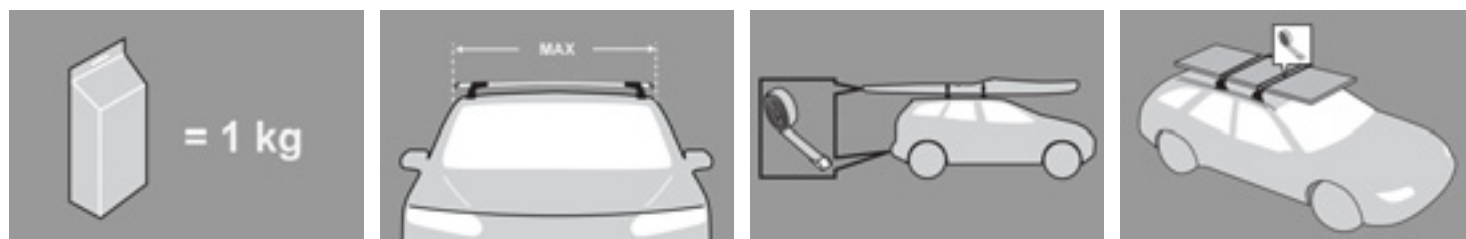

x 1

11-04-229



x 1

11-04-230




x 1

11-04-233




x 1

11-04-234

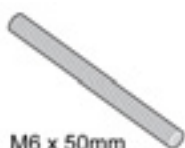

x 2

M6 x 50mm

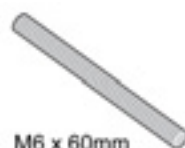

x 2

M6 x 60mm



x 6




x 6



x 8



x 4

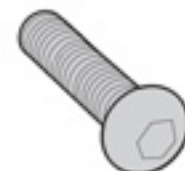

x 4




x 6



x 4



x 1

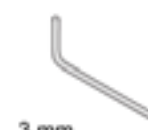

x 1

3 mm



x 1

## First Time Installation



- Remove parts from packaging and check contents. Contact your Prorack dealer if parts are missing or damaged.



- This kit fits type D only.



- Use keys to remove covers.



- Remove Hex Key from right hand cover.

## Front and rear crossbars only:



- Use the Hex Key to remove the endcap screw.



- Remove the endcap by pulling on the endcap pin and pushing on the top of the endcap. Use a side to side motion to assist.
- Repeat on other crossbar.



- Use hex screwdriver to reverse adjusting screw 10 turns.



- Press adjusting screw and slide the leg completely off the crossbar.



- Use the Hex Key to fully undo the adjusting screw.



- Remove the adjusting screw and store in a safe place.
- Repeat on both leg assemblies.



- Use the Hex Key to lift the toggle assembly.



- Remove the complete toggle assembly.



- Store items away in a safe place.



- Place two packers on each leg.
- Repeat on both leg assemblies.



- Insert the cap screw and washer together through the back of the leg.



- Assemble the nut onto the capscrew. Do Not Fully Tighten.




- Place leg assembly back onto crossbar. Ensure the nut goes into the bottom slot of the crossbar.
- Repeat on other crossbar.



- Carefully hold the endcap assembly and reinsert back onto the crossbar.
- Use the Hex Key to secure the endcap screw back into place.




## Fitment

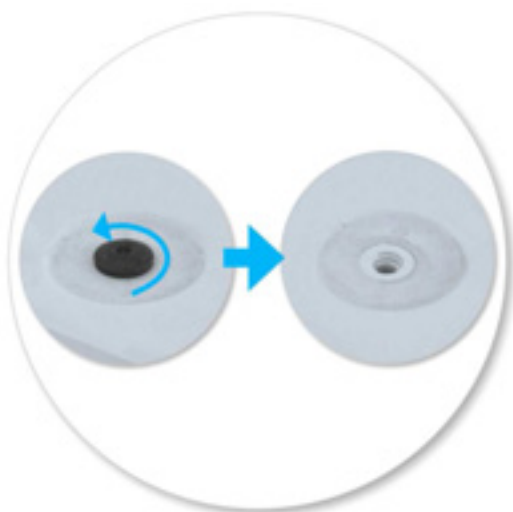

- Attaches to factory-fitted mounting points
- Open or remove fixed-point covers.



- Install adaptor onto vehicle.
- Repeat for all six positions.

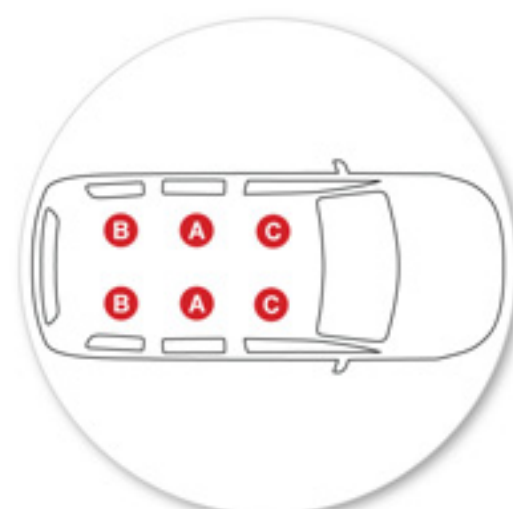


- It is important to put the grubscrews in the correct position on the vehicle.
- Use the following grubscrew lengths:
  - A = M6 x 40mm
  - B = M6 x 50mm
  - C = M6 x 60mm



- Screw grub screw into adaptor using hex key. Tighten firmly.
- Repeat for all six positions.




- Refer to the underside of the pad for the part number.

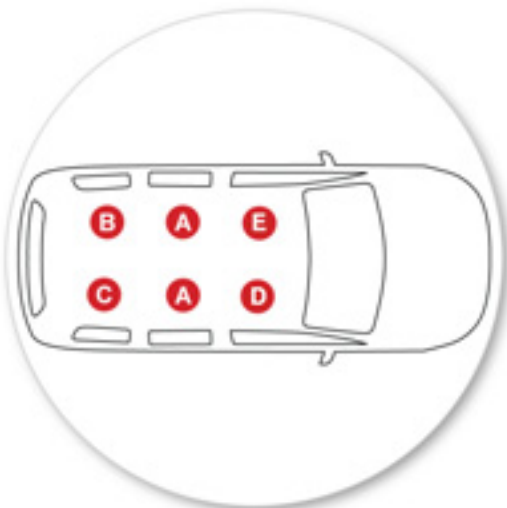

- It is important to put the pads in the correct position on the vehicle.
- Letters refer to the pad part numbers and position.
- Pad Part Number:  
Supplied with crossbars:  
A = 11-04-216  
Supplied in fitting kit box:  
B = 11-04-229  
C = 11-04-230  
D = 11-04-233  
E = 11-04-234



- Place pad over grub screw.
- Repeat for all six positions.

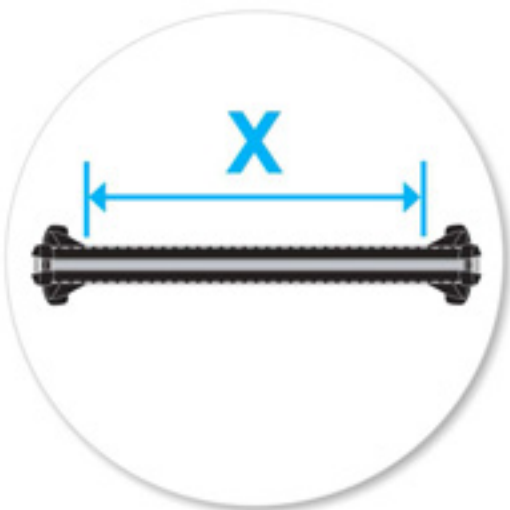

- Please check the rear of this manual for information relating specifically to your vehicle.
- Adjust crossbar in or out to suit vehicle. Refer to the crossbar instructions for crossbar adjustment.

## Front and rear crossbars only:



- Ensure each end of the crossbar is adjusted equally.



- Using 5mm Hex Key supplied with this kit, fully tighten to 5Nm.

## Centre crossbars only:



- Use the Hex Key to fully undo the adjusting screw.



- Press adjusting screw and pull crossbar legs out. Refer to the crossbar instructions for crossbar adjustment.
- Ensure each end of the crossbar is adjusted equally.



- Tighten adjusting screw to 5 Nm.

## All Crossbars:



- Remove clamp block by pressing backwards.



- Select plastic internal block (from fitting kit) and insert into foot.



- Place crossbars on pads ensuring the pads fit into the holes underneath the foot and the grub screw pass through the hole in the foot.



- Tighten the red plastic knob.



- Ensure the red plastic knob is in the position shown when fully tightened.
- Repeat for all six positions.



- Check crossbar is securely attached to the vehicle.



- Use keys to fit and lock covers

## CAUTION:

Recheck all fasteners immediately after a load is applied to the crossbars.

Regularly check screws are tight.